

OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION
Airbus	AS-350	704A39812004	77044-1	MAG SEAL, TR GEARBOX
Bell	206A/B, 206L, OH, TH	047-641-175-001	047-641-175-001AA	RACE - TR
Bell	CH-146, UH-1, UH-1N, UH-1Y, 206B, L, L1, L3, L4	080631	080631AA	WEAR SLEEVE
Bell	OH-58D, 407	099380	099380AA	WEAR SLEEVE
Bell	407	140-007-28T24E6	140-007-28T24E6AA	WASHER
Bell	407	20-065-07074CA	20-065-07074CAAA	BOLT
Bell	407, 427	20-065H06010CA	20-065H06010CAAA	BOLT (SHEAR BEARING)
Bell	214ST, 206L-4, 407	204-010-428-001	2AA-010-428-001	SEAL
Bell	204B, 205A, 212-UH	204-010-441-003	2AA-010-441-003	RACE
Bell	204B, 204A, 212, CH, UH	204-011-131-107	2AA-011-131-107	SEAL
Bell	204B, 205A, 212	204-011-132-001	2AA-011-132-001	SEAL
Bell	204, 205A-1, 212, 412, 205A/B, 206L, 407	204-040-132-001	2AA-040-132-001	RACE
Bell	204B, 205A-1, 212, 412, 206A/B	204-040-725-003	2AA-040-725-003	ROLLER BEARING SET
Bell	206L4	20546	20546AA	SHAFT
Bell	206 Series	206-010-111-105	2AA-010-111-105	ADJUSTING SCREW
Bell	206A, 206B	206-010-245-101	2AA-010-245-101	SLEEVE
Bell	206 Series, 407	206-010-408-001	ABLE-2844-001	PIVOT PIN- SWASHPLATE
Bell	206B, L, L-1, L-3, L-4 Big Head	206-010-443-001	2AA-010-443-001	DUPLEX BEARING
Bell	206 Series	206-010-795-101	2AA-010-795-101	PITCH LINK ASSY
Bell	206B, L3, L4	206-010-795-105	2AA-010-795-105	PITCH LINK ASSY
Bell	206 Series	206-011-102-119	2AA-011-102-119	PILLOW BLOCK ASSY
Bell	205 Series	206-011-102-121	2AA-011-102-121	PAD
Bell	206 Series	206-011-102-123	2AA-011-102-123	PAD
Bell	206 Series	206-011-111-001	2AA-011-111-001	BEARING
Bell	206 Series	206-011-111-003	2AA-011-111-003	RACE
Bell	206 Series	206-011-115-001	2AA-011-115-001	CLOSURE
Bell	206 Series	206-011-118-001	2AA-011-118-001	YOKE BEARING
Bell	206 Series	206-011-119-005	2AA-011-119-005	NUT
Bell	206 Series	206-011-119-101	2AA-011-119-101	NUT
Bell	206A, B, B-1, L, L-1, L-3, L-4	206-011-125-001	2AA-011-125-001	PIN ASSY
Bell	206A, B, B-1	206-011-125-105	2AA-011-125-105	PIN ASSY
Bell	206 Series	206-011-128-103	2AA-011-128-103	BLUE COAT BUSHING
Bell	206A, -B, -B3, -L, -L1, -L3	206-011-129-003	2AA-011-129-003	RETAINER
Bell	206B, 206L, 206L1, 206L3, 206L4	206-011-130-003	2AA-011-130-003	RETAINER ASSEMBLY
Bell	206	206-011-132-113A	2AA-011-132-113A	MAIN ROTOR GRIP
Bell	206 Series	206-011-134-001	2AA-011-134-001	BUFFER PAD
Bell	206 Series	206-011-150-105	2AA-011-150-105	FITTING ASSY
Bell	206A, B, L, L1, L3, L4, OH-58, TH-57A, 57B, 57C, 57D, TH-67	206-011-156-101	2AA-011-156-101	WEAR DISK
Bell	206 Series	206-011-260-101	2AA-011-260-101	LATCH BOLT
Bell	206A/B	206-011-260-103	2AA-011-260-103	LATCH BOLT
Bell	206 Series	206-011-727-001	2AA-011-727-001	BUSHING- TR
Bell	206 Series, 407	206-011-727-003	2AA-011-727-003	BUSHING- TR
Bell	206 Series	206-011-732-001	2AA-011-732-001	SLEEVE, PC TUBE TR
Bell	206L-4, 407	206-011-732-103	2AA-011-732-103	SLEEVE TR
Bell	206A/B	206-031-509-103	2AA-031-509-103	DRAG PIN ASSY
Bell	206A/B	206-031-513-101	2AA-031-513-101	BUSHING
Bell	206L, L-1, L-3, L-4	206-033-517-007	2AA-033-517-007	JOURNAL BEARING
Bell	206A, 206B, 222, 230	206-040-031-001	2AA-040-031-001	BEARING
Bell	206A, B, B-1, L, L-1, L-3, L-4	206-040-032-105	2AA-040-032-105	TRANSMISSION DUPLEX BEARING
Bell	206-A, -B, -L, L-1, -L3	206-040-048-101	ABLE-0033-101	INPUT PINION ADAPTER
Bell	206A/B	206-040-061-001	ABLE-0734-001	LINER
Bell	206B, L, L-1, L-3, L-4	206-040-062-003	2AA-040-062-003	PLATE
Bell	206B-L4	206-040-156-001	76022-1	MAIN DRIVE TRANS, QUILL
Bell	206B-L3	206-040-156-101	81015-1	MAIN DRIVE TRANS, QUILL
Bell	206-A, -B, -B3, -L, -L1, -L3	206-040-203-003	ABLE-0104-003	ADAPTER
Bell	206 Series	206-040-205-105	2AA-040-205-105	BEARING
Bell	206 Series	206-040-272-101	2AA-040-272-101	SEAL ASSY
Bell	206 Series	206-040-320-103	2AA-040-320-103	OIL COOLER BLOWER SHAFT
Bell	206 Series	206-040-420-101	ABLE-2848-101	SPACER
Bell	206 Series	206-040-439-001	2AA-040-439-001	T/R OUTPUT SHAFT
Bell	206L, L1, L3	206-040-537-001	2AA-040-537-001	LINER
Bell	206 Series	206-062-101-001	2AA-062-101-001	FWD ENGINE LEG ASSY
Bell	206 Series	206-062-101-002	2AA-062-101-002	FWD ENGINE LEG ASSY
Bell	206 Series	206-062-101-101	2AA-062-101-101	FWD ENGINE LEG ASSY
Bell	206 Series	206-062-101-102	2AA-062-101-102	FWD ENGINE LEG ASSY
Bell	206A-B	206-310-004-101	2AA-310-004-101	STRAP ASSY. 36 MONTH-SMALL HEAD
Bell	206B, L, L-1, L-3, L-4	206-310-004-103	2AA-310-004-103	STRAP ASSY. 36 MONTH-BIG HEAD
Bell	206 Series, 407	206-310-700-101	2AA-310-700-101	TR SEAL
Bell	206 Series	206-340-104-101	2AA-340-104-101	SEAL
Bell	206 Series	206-340-204-101	2AA-340-204-101	SEAL
Bell	206 Series	206-340-206-101	2AA-340-206-101	SEAL
Bell	206A, B, B-1, L, L-1, L-3, L-4	206-340-301-101	2AA-340-301-101	ROTOR BRAKE DISC
Bell	412, 427	206-340-401-101	2AA-340-401-101	SLEEVE
Bell	206A, 206L, 214ST, 407, OH-58, TH-57A, 57B, 57C, 57D, TH-67	209-340-265-103	2AA-340-265-103	SEAL
Bell	212	212-010-121-101	2AA-010-121-101	BUFFER PAD
Bell	212, 412, 412EP	212-040-176-101	2AA-040-176-101	OIL BOOT
OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION

Bell	204B, 205A-1, 212	212-311-007-101	2AA-311-007-101	BEARING - BELL MEDIUM YOKE
Bell	204B, 205A-1, 212	212-311-008-101	2AA-311-008-101	BEARING - BELL MEDIUM YOKE
Bell	204B, 205A-1, 212	212-340-113-101	2AA-340-113-101	SEAL
Bell	407, OH-58D	214-040-814-105	2AA-040-814-105	OIL SEAL WEAR SLEEVE
Bell	204B, 205A-1, 214B	214-040-867-101	ABLE-2747-101	SLEEVE
Bell	206L, L1, L3	35-79501-1093-2	ABLE-0182-1093-2	SHAFT
Bell	206L-4, 407 Series	35-79501-1145-2	ABLE-0182-1145-2	SHAFT
Bell	206A, A-1, B, B-1	35-79501-2005-3	ABLE-0182-2005-3	SHAFT
Bell	260A, B, L, L-1, L-3, L-4, 407, 427	38-79004-1045-2	38-79004-1045-2AA	SEAL
Bell	407, 427	406-010-121-101	4AA-010-121-101	PLUG
Bell	407, 427	406-010-123-101	4AA-010-123-101	LOCK, DROP STOP
Bell	407, 427	406-010-123-103	4AA-010-123-103	LOCK, DROP STOP
Bell	407	406-010-421-103	4AA-010-421-103	SPACER
Bell	407	406-010-429-101	4AA-010-429-101	SWASHPLATE DRIVE PIN
Bell	407, OH-58D	406-010-457-105	4AA-010-457-105	BUSHING
Bell	407, 427	406-010-458-101	4AA-010-458-101	SPACER
Bell	407	406-012-104-103	4AA-012-104-103	PLATE, DRIVER CONTROL
Bell	407	406-310-402-103	4AA-310-402-103	SWASHPLATE DUPLEX BEARING
Bell	407	406-310-406-103	4AA-310-406-103	BUSHING
Bell	407	406-310-406-103	4AA-310-406-103	BUSHING
Bell	407	406-310-407-101	4AA-310-407-101	SEAL
Bell	407	406-310-410-101	4AA-310-410-101	SLIDER BEARING
Bell	206L-4, 407, 427	406-312-103-101	4AA-312-103-101	TR PITCH LINK ASSY
Bell	206-A, -B, -L, L-1, -L3	406-340-104-101	4AA-340-104-101	SEAL
Bell	206 Series, 407	406-340-105-101	4AA-340-105-101	SEAL
Bell	205A-1, 212, 412, 412EP, 427	406-340-105-103	4AA-340-105-103	SEAL
Bell	407	407-010-105-103	4AA-010-105-103	STUD FOR DROOP STOP
Bell	407	407-010-206-103	4AA-010-206-103	SPRING ASSY
Bell	407	407-040-320-103	4AA-040-320-103	TR FAN SHAFT/OIL COOLER BLOWER
Bell	407	407-040-416-103	4AA-040-416-103	TR OUTPUT SHAFT
Bell	407	407-310-203-101	4AA-310-203-101	CORNER MOUNT
Bell	206L-4, 407	407-312-100-101	4AA-312-100-101	TR FLAPPING BEARING
Bell	407	407-340-003-101	4AA-340-003-101	INPUT SEAL
Bell	407	407-340-004-101	4AA-340-004-101	WEAR SLEEVE
Bell	407	407-340-005-101	4AA-340-005-101	SEAL
Bell	407	407-340-032-101	4AA-340-032-101	DUPLEX BEARING
Bell	206L-4, 407	407-340-102-101	4AA-340-102-101	SEAL
Bell	407	407-340-106-101	4AA-340-106-101	WEAR SLEEVE
Bell	407	407-340-318-101	4AA-340-318-101	ROTOR BRAKE DISC
Bell	412, 412EP	412-010-106-101	4AA-010-106-101	PIVOT BEARING
Bell	212/412	412-040-111-105	81109-2	TRANS, INPUT QUILL
Bell	412, CH-146	412-340-100-101	4AA-340-100-101	SEAL
Bell	412	412-340-102-101	4RP-340-102-101	BOOT
Bell	407, 427	427-342-412-101	4AA-342-412-101	INPUT SEAL
Bell	407, 427	427-342-415-101	4AA-342-415-101	SLEEVE
Bell	206 Series	529052	529052AA	SEAL
Bell	206 Series, 407	535639-10	535639AA-10	SEAL - TR
Bell	412	536841	536841AA	SLEEVE
Bell	205A, 205B, 212, 412, 214B, 214ST	9440791-1	9440791-1AA	DISC
Bell	206A, 206B, 206B3, 206L, 206L1, 206L3	9440904	9440904AA	DISC
Bell	206 Series	EB9025-14	AA9025-14	NUT
Bell	206B, L, L-1, L-3, L-4 Big Head	S30769	S30769AA	EXCLUDER
Leonardo	PT6C-67C, AW139	3057362-01	3057362-01AA	SEAL
Leonardo	139	3G6220A05051	3G6220A05051AA	TEFLON WASHER
Leonardo	139	3G6220A05351	3G6220A05351AA	ANTI ROTATION BLOCK
Leonardo	129139	3G6230A01852	3G6230A01852AA	BUSHING
Leonardo	109139	3G6230A03752	3G6230A03752AA	SLEEVE
Leonardo	139	3G6430A00452	3G6430A00452AA	SCISSOR COUPLING
Leonardo	139	3G6430A01851	3G6430A01851AA	LOCK WASHER
Leonardo	139	AW005BR095-C	AW005BR095-CAA	TORQUE TUBE ASSY BUSHING
Leonardo	139	AW005BR105-C	AW005BR105-CAA	TORQUE TUBE ASSY BUSHING
NDI	206A, B, B-1, L, L-1, L-3, L-4	206-340-301-101	D0143-1	L4 DISC
NDI	206L	206-340-301-103	B0223-2	CALIPER ASSY, 206L
NDI	429	206-340-301-105	D0143-3	DISC
NDI	407	407-340-302-103	B0223-4	CALPIER ASSY 407
NDI	407	407-340-318-101	D0162-1	407 DISC
NDI	429	427-340-352-111	B0238-1	CALIPER ASSY
NDI	429	427-340-352-112	B0238-2	CALIPER ASSY
NDI	407	427-340-352-113	B0244-1	CALIPER ASSY
NDI	206L	B0223-KA	B0223-KA	OVERHAUL KIT, ROTOR BRAKE (206L) FOR TWO CALIPER ASSYS
NDI	407	B0223-KB	B0223-KB	OVERHAUL KIT, ROTOR BRAKE (407) FOR ONE CALIPER ASSY
NDI	407	B0223-MOD-4	B0223-MOD-4	CALIPER MOD KIT
NDI	429	B0238-K	B0238-K	OVERHAUL KIT
NDI	407 & 427	B0244-K	B0244-K	OVERHAUL KIT
NDI	206L	D0134-5	D0134-5	HOUSING
NDI	206L & 407	D0134-6	D0134-6	HOUSING
NDI	407	D0134-9	D0134-9	HOUSING ASSY
NDI	206L & 407	D0135-1	D0135-1	PISTON
NDI	206L & 407	D0136-2	D0136-2	SEAT
NDI	407	D0136-3	D0136-3	FWD SEAT 407
NDI	407	D0137-1	D0137-1	PLUG
<b>OEM</b>	<b>MODEL APPLICABILITY</b>	<b>OEM P/N</b>	<b>ABLE P/N</b>	<b>DESCRIPTION</b>
NDI	206L	D0139-1	D0139-1	TUBE TRANSFER

NDI	206L & 407	D0141-1	D0141-1	ROD
NDI	206L & 407	D0142-1	D0142-1	SPRING
NDI	206L & 407	D0151-1	D0151-1	VALVE
NDI	206L & 407	D0151-2	D0151-2	VALVE
NDI	407 & 427	D0159-1	D0159-1	TUBE TRANSFER
NDI	206L	D0166-1	D0166-1	BOLT
NDI	206L	D0168-1	D0168-1	WASHER
NDI	407	D0168-2	D0168-2	WASHER
NDI	407	D0189-2	D0189-2	STANDPIPE
NDI	407	D0290-2	D0290-2	FRICTION PAD
NDI	407	D0292-1	D0292-1	BOLT
NDI	407	D0294-1	D0294-1	BRACKET ASSY
NDI	407 & 427	D0296-1	D0296-1	BRACKET ASSY
NDI	407 & 427	D0301-1	D0301-1	PISTON ASSY
NDI	407 & 427	D0303-1	D0303-1	FRICTION PAD
NDI	407 & 427	D0307-1	D0307-1	PIN
NDI	407 & 427	D0311-1	D0311-1	HOUSING ASSY
NDI	407 & 427	D0312-1	D0312-1	HOUSING ASSY
NDI	206L	D0314-1	D0314-1	FRICTION PAD
NDI	429	D0413-1	D0413-1	SWITCH
NDI	407 & 427	TF005-012	TF005-012	SCRAPER ASSY
Sikorsky	S-76A, B, C	76107-08002-113	ABLE-2819-113	BUSHING
Sikorsky	S-76A, B, C	76107-08002-114	ABLE-2819-114	BUSHING
Sikorsky	S-76A	76107-08006-143	ABLE-2826-143	LONG PIN
Sikorsky	S-76A	76107-08006-144	ABLE-2826-144	SHORT PIN
Sikorsky	S-76B, C	76107-08006-153	761AA-08006-153	PIN
Sikorsky	S-76B, C	76107-08006-154	761AA-08006-154	PIN
Sikorsky	S-76A, B, C	76107-08007-103	ABLE-2820-103	WASHER
Sikorsky	S-76A	76351-09023-101	76351-09023-101AA	LINER
Sikorsky	S-92A	92209-04238-103	92209-04238-103AA	LOCATING PIN
Sikorsky	S-92A	92209-04238-105	92209-04238-105AA	LOCATING PIN
Sikorsky	S-76A, B, C	SB5200-103	SB5200-103AA	BEARING
Sikorsky	S-76A, B, C	SB8002-103	SB8002-103AA	SEAL