

Part Number	Description
8527855	Valve Assy
8538312	Cooler
204-011-402-125	Inner Ring Assy.
204-011-408-107	Sleeve
205-040-249-003	Roller Bearing
206-010-444-001	Cap Assembly
206-010-451-109	Ring Assy
206-010-452-113	Support Assy
206-010-454-109	Sleeve Assy
206-011-149-105	Yoke Assy
206-011-814-113	Housing Assembly
206-031-592-001	Fitting Assembly
206-031-592-002	Fitting Assembly
206-031-593-002	Fitting Assembly
206-031-593-002	Fitting Assembly
206-040-030-001	Bearing
206-040-030-003	Bearing
206-040-031-001	Bearing
206-040-032-101	Bearing
206-040-032-105	Bearing
206-040-034-003	Bearing
206-040-036-003	Bearing
206-040-036-101	Bearing
206-040-038-101	Bearing
206-040-052-009	Housing Assy
206-040-061-001	Liner
206-040-062-003	Plate
206-040-129-001	Housing Assy
206-040-151-013	Top Case Assembly
206-040-152-001	Support Assy
206-040-184-001	Oil Pump Assembly
206-040-205-105	Bearing
206-040-206-001	Bearing
206-040-207-001	Bearing
206-040-222-009	Shaft
206-040-236-017	Housing Assembly
206-040-402-105	Tail Rotor Gearbox
206-040-425-121	Case
206-040-530-001	Main Case
206-040-536-103	Bearing
206-076-031-013	Servo Actuator
206-076-031-017	Servo Actuator
206-076-031-023	Servo Actuator
206-076-062-003	Servo Assembly
206-340-202-101	Oil Cooler
212-040-210-003	Bearing
212-040-210-101	Bearing

212-076-005-111	servo Actuator
212-076-015-001	Check Valve Assembly
214-040-125-101	Bearing
406-040-036-107	Bearing
406-040-430-105	Bearing
406-040-500-147FM	Freewheel Assembly
406-040-531-101	Bearing
407-310-100-107	Damper
407-310-101-105	Shear Bearing
407-310-102-103	Feathering Bearing
41103750-017	Servo Actuator
412-010-106-101	Pivot Bearing
412-010-106-101	Bearing
412-010-177-105	Splined Plate
412-010-179-105	Cone
412-010-190-105	Spindle
412-010-263-101	Arm Assy
412-010-264-101	Bracket
412-010-264-105	Bracket
412-010-405-111FM	Drive Link Assembly
412-010-453-105	Support Assembly
412-040-601-111FM	Coupling
206-040-410-103	Bearing
206-040-031-003	Bearing
206-040-036-103	Bearing
206-040-409-001	Bearing
206-040-410-103	Bearing
406-040-433-105	Bearing
540-011-449-003	Bearing
SC5083-1	Servo Actuator AS350
SC5084-1	Servo Actuator AS350
206-040-014-105	Mast Assy